


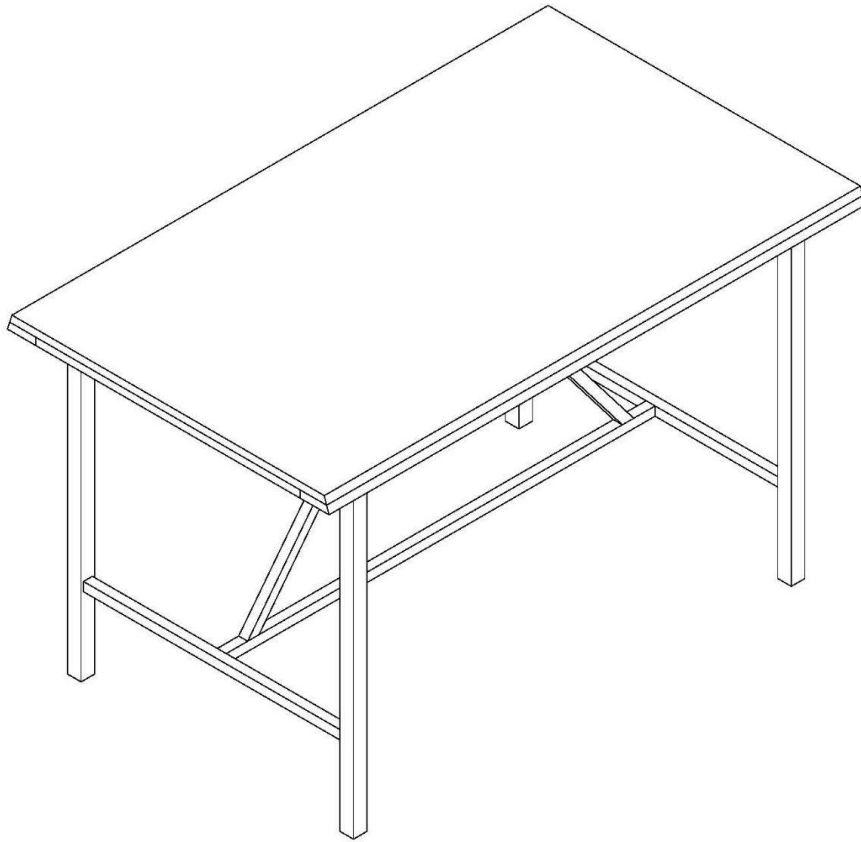

assembly instruction


Terrance Counter Table (Top)

T28-13C-CBW


Pre - Install Instruction

- Do not FULLY - TIGHTEN the screws until all screw is ready assembled
- Do not OVER - TIGHTEN the screws to avoid causing damages to the thread.
- Keep all parts & hardware out of reach of children

Parts




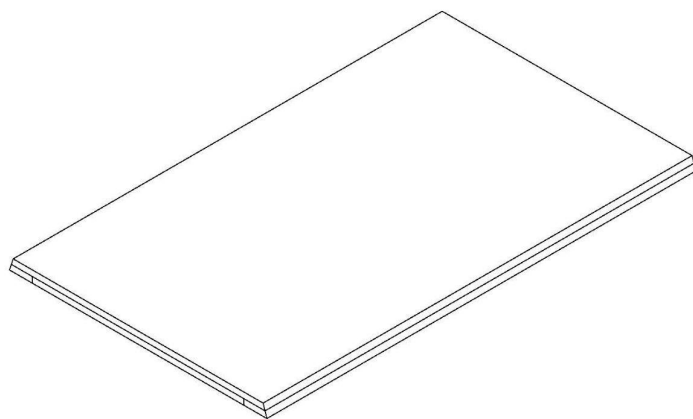


A Table top X1

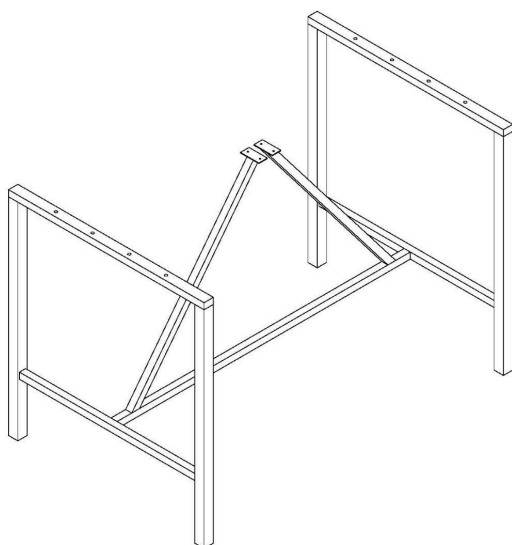

B Leg X1


Hardware

- | | | | |
|---|------------------|---|-----|
| 1 | Screw M8 X 55 |  | x8 |
| 2 | Screw M8 X 45 |  | x16 |
| 3 | Wood screw |  | x4 |
| 4 | Spring washer M8 |  | x24 |
| 5 | Flat washer M8 |  | x24 |
| 5 | Allen key M5 |  | x1 |

Step 1

Parts

- | | | |
|----------|-----------|----|
| A | Table top | x1 |
| B | Leg | x1 |

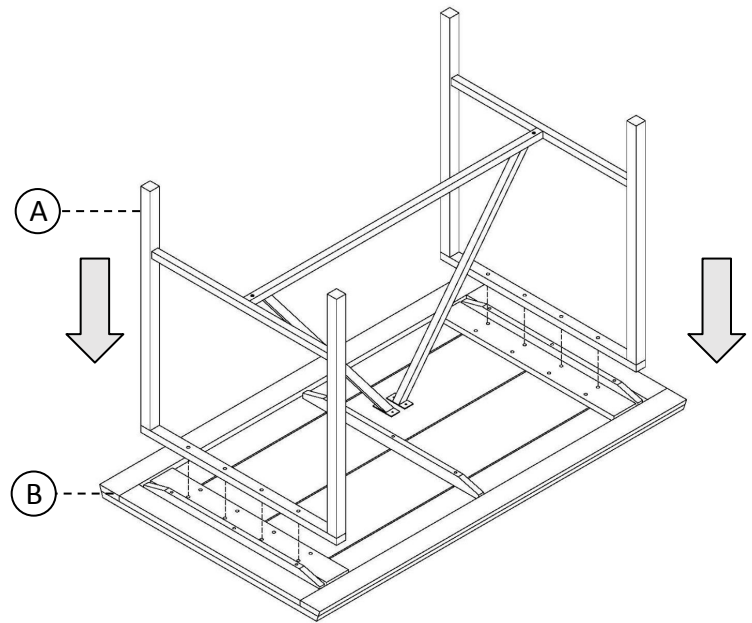


Assembly Step Description

Turn the tabletop and legs upside down, then place the legs onto the underside of the tabletop. Ensure that all screw holes are properly aligned.

Step 2

Hardware

- | | | |
|----------|------------------|----|
| 1 | Screw M8 X 55 | x8 |
| 4 | Spring washer M8 | x8 |
| 5 | Flat washer M8 | x8 |
| 6 | Allen key M5 | x1 |

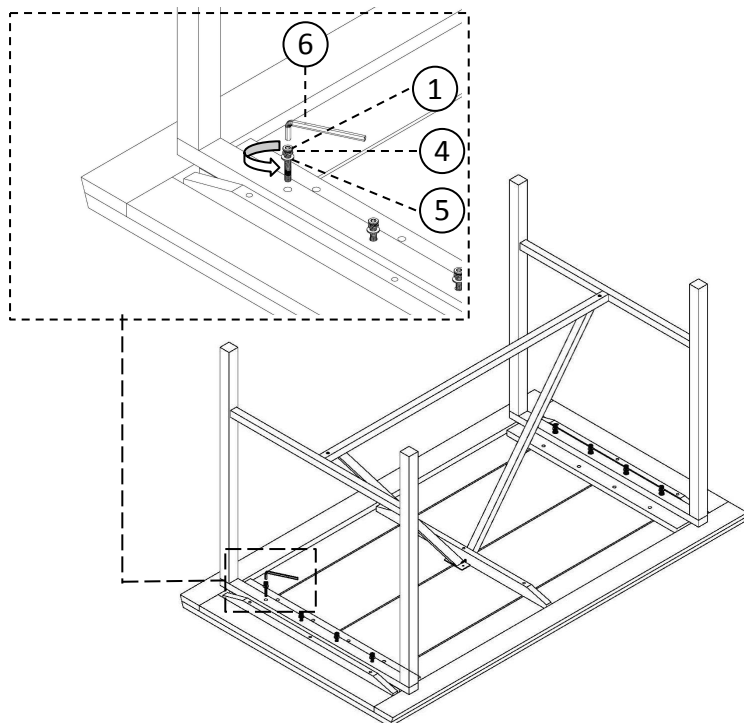


Assembly Step Description

Use the M8 × 55 screw, M8 spring washer, and M8 flat washer in the correct order to assemble the legs to the tabletop by using the M5 Allen key.

Step 3


Hardware

3 Wood screw x4

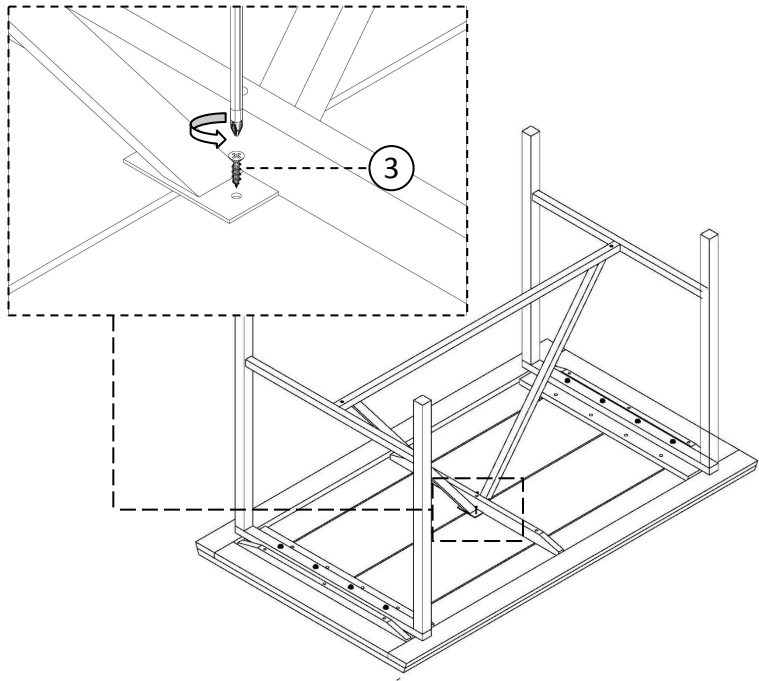

Assembly Step Description

Use and tighten the wood screws to secure the metal plate to the tabletop using a screwdriver or drill.

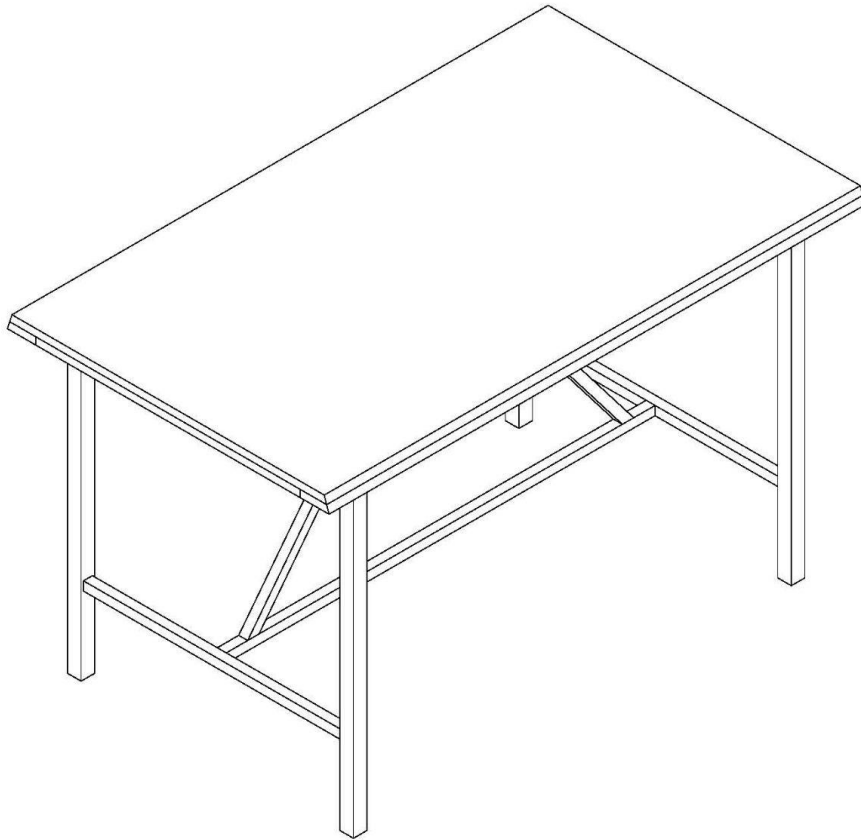

Thank You For Your Purchase!

**Contact us if you need any
assistance**

018 – 985 4811

018 – 351 4811

customerservice@ruma-home.com

Care Instruction

- Wipe with soft, dry cloth
- Hardware may loosen over time. Periodically check to make sure all connection are tight