


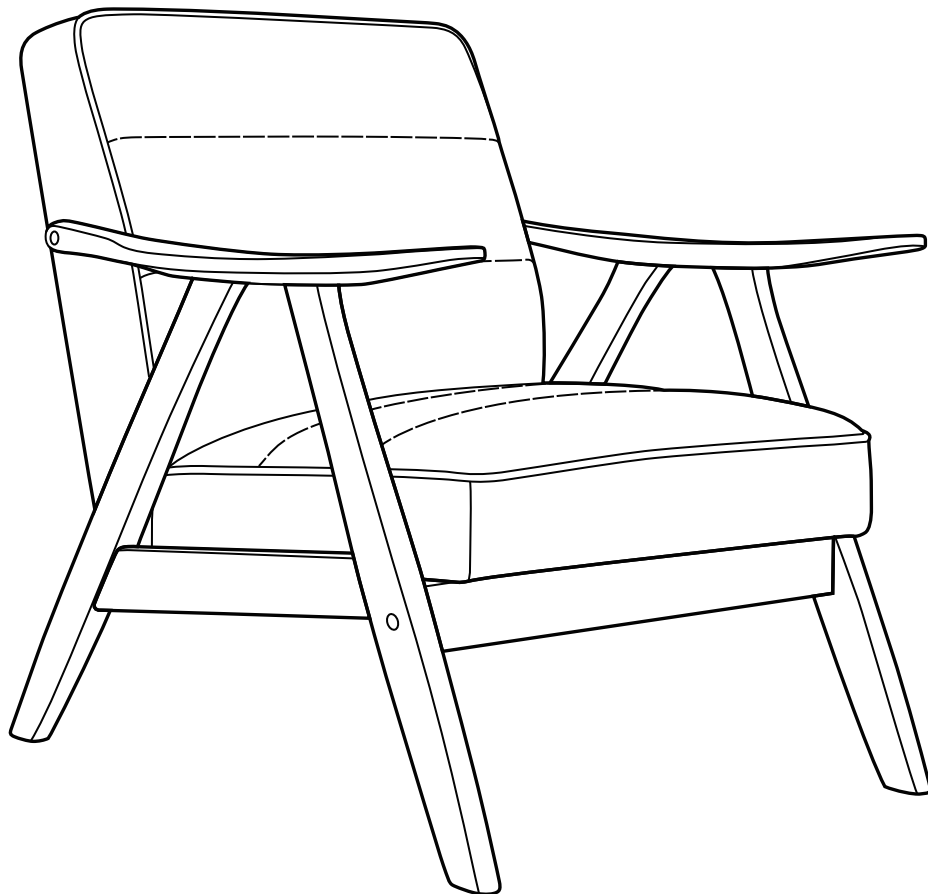

assembly instruction


Astrid Mid Century Lounge Chair

A24-131


Pre - Install Instruction

- Do not FULLY - TIGHTEN the nut or bolt until all nut and bolt is ready assembled
- Do not OVER - TIGHTEN the nut or bolt to avoid causing damages to the thread.
- Keep all parts & hardware out of reach of children

Parts

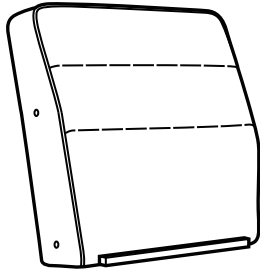


A Back Cushion x1



B Seat Cushion x1



C Front Rail x1

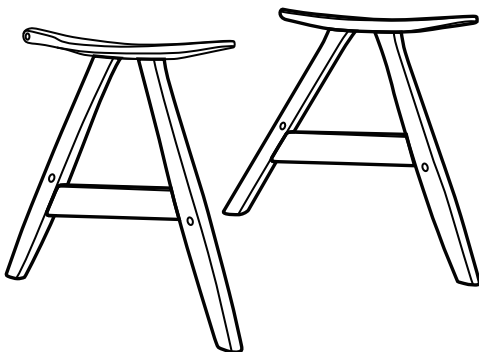

D Leg Frame x2

Hardware

1	Bolt M6 X 65mm		x6
2	Bolt M6 X 50mm		x1
3	Spring Washer M6		x1
4	Flat Washer M6 X 19mm		x1
5	Barrel Nut M6 X 13mm		x2
6	Allen Key M4		x1


Step 1

Parts

- A** Back Cushion x1
- B** Seat Cushion x1

Hardware

- 2** Bolt M6 X 50mm x1
- 3** Spring Washer M6 x1
- 4** Flat Washer M6 X 19mm x1
- 6** Allen Key M4 x1

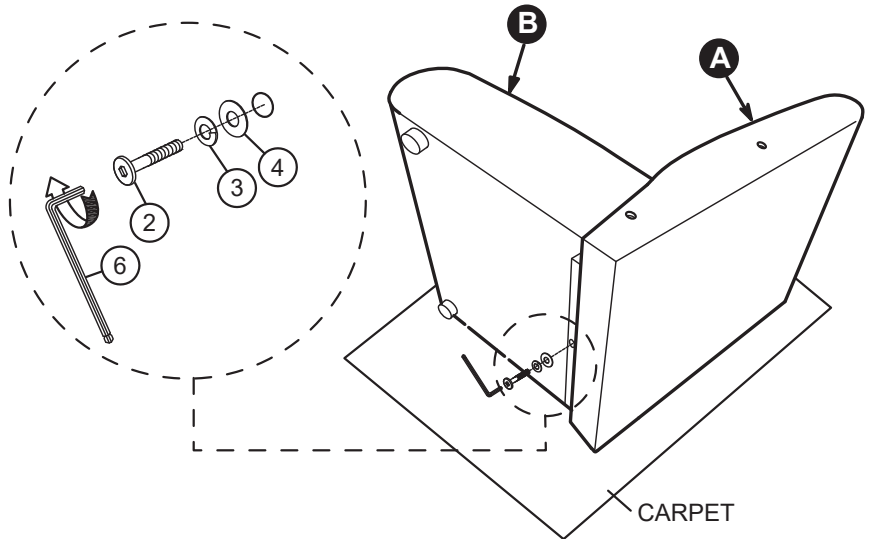

Assembly Step Description

Make sure the hole on the back cushion (A) aligns with the hole on the bottom of the upholstery. Tighten the bolt (2), spring washer (3) and flat washer (4) by using the allen key (6).


Step 2

Parts

- C** Front Rail x1
- D** Leg Frame x1

Hardware

- 1** Bolt M6 X 65mm x3
- 5** Barrel Nut M6 X 13mm x1
- 6** Allen Key M4 x1

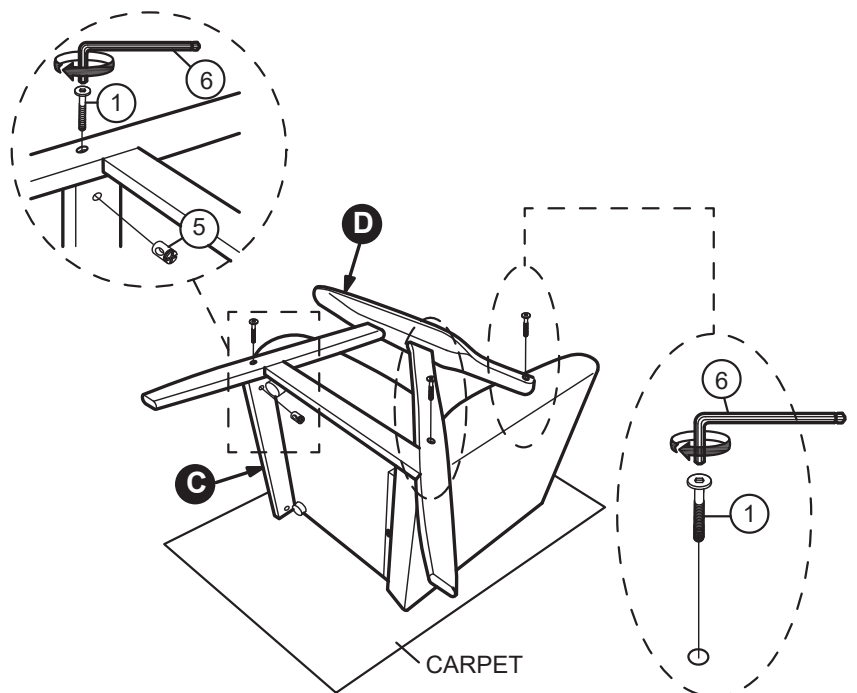

Assembly Step Description

Position the Front Rail (C) between the two sides of the leg frame as shown in the diagram. Align all bolt holes carefully. Install the Barrel Nut (5) into the side hole where indicated. Insert the M6 x 65 mm bolts (1) through the top holes of the frame. Use the Allen Key (6) to tighten all bolts securely. Do not fully tighten the bolts until all connections are properly aligned.


Step 3

Parts

- | | | |
|----------|------------|----|
| C | Front Rail | x1 |
| D | Leg Frame | x1 |

Hardware

- | | | |
|----------|----------------------|----|
| 1 | Bolt M6 X 65mm | x3 |
| 5 | Barrel Nut M6 X 13mm | x1 |
| 6 | Allen Key M4 | x1 |

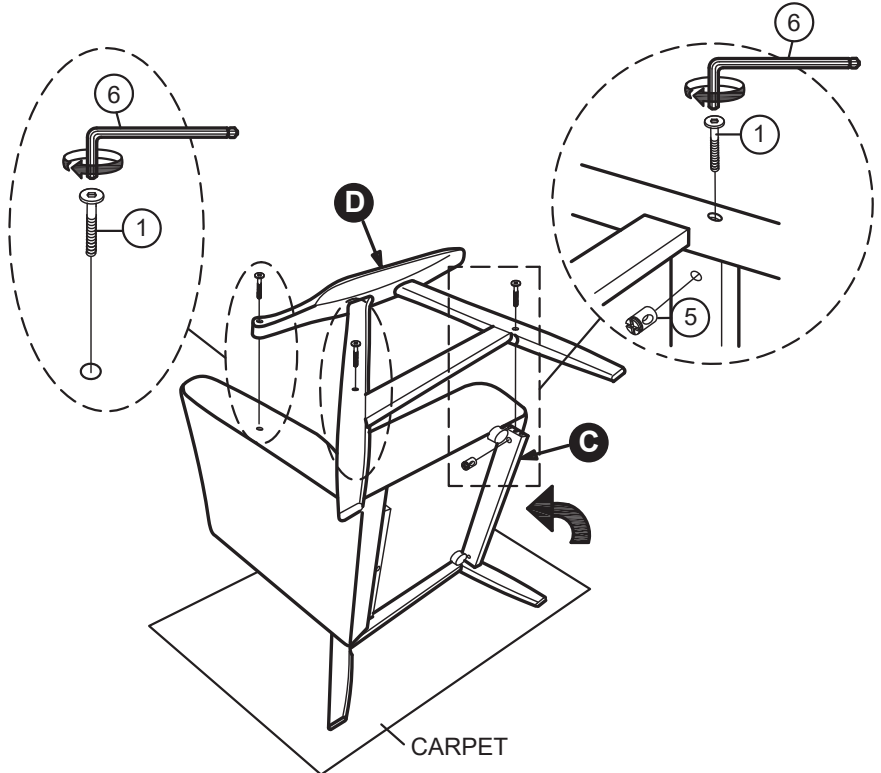


Assembly Step Description

Position the Front Rail (C) between the two sides of the leg frame as shown in the diagram. Align all bolt holes carefully. Install the Barrel Nut (5) into the side hole where indicated. Insert the M6 × 65 mm bolts (1) through the top holes of the frame. Use the Allen Key (6) to tighten all bolts securely. Do not fully tighten the bolts until all connections are properly aligned.

Step 4


Hardware

- | | | |
|----------|--------------|----|
| 6 | Allen Key M4 | x1 |
|----------|--------------|----|

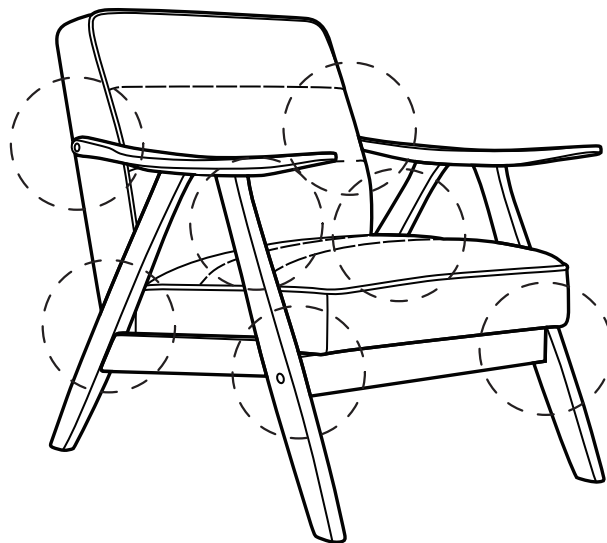

Assembly Step Description

Fully tighten all the bolts by using allen key (6).

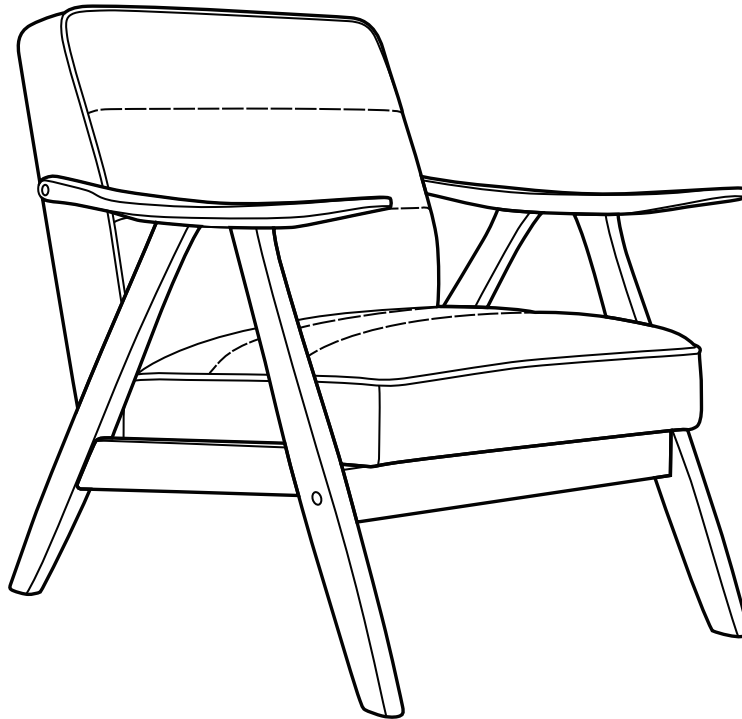

Thank You For Your Purchase!

Contact us if you need any assistance

018 - 985 4811

018 - 351 4811

customerservice@ruma-home.com

Care Instruction

- Wipe with soft, dry cloth.
- To protect finish avoid the use of chemical cleaners.
- Hardware may loosen over time. Periodically check to make sure all connection are tight.