


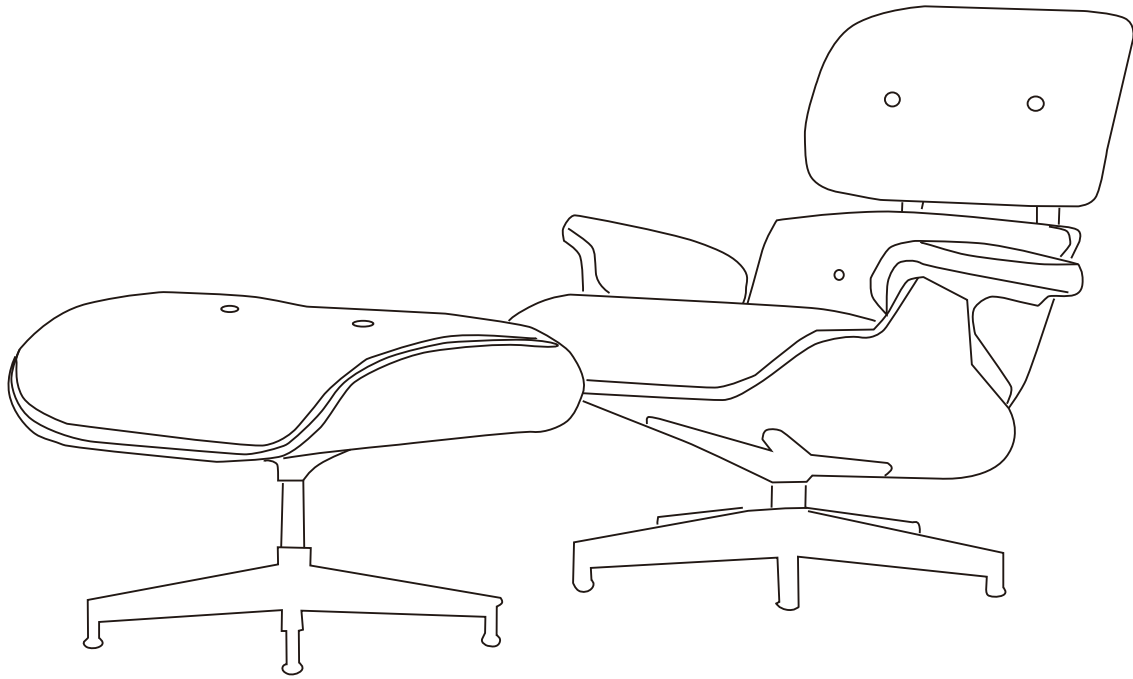

assembly instruction


Replica Eames Lounge Chairs with Ottomans

EMS-132


Pre - Install Instruction

- Do not FULLY - TIGHTEN the nut or bolt until all nut and bolt is ready assembled
- Do not OVER - TIGHTEN the nut or bolt to avoid causing damages to the thread.
- Keep all parts & hardware out of reach of children


Parts

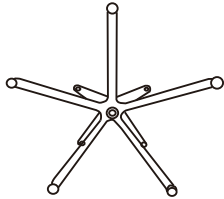


A Chair tripod x1

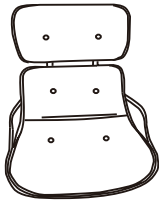


B Seat shell x1



C Armrest x2

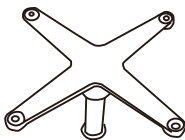

D Ottoman leg: Upper x1

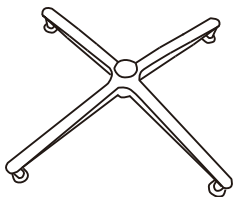

E Ottoman leg:Bottom x1



F Ottoman seat x1

Hardware

1	Screw M6x22		x4
2	Screw M6x30		x8
3	Allen Key		x1


Step 1

Parts

- | | | |
|----------|------------|----|
| B | Seat shell | x1 |
| C | Armrest | x2 |

Hardware

- | | | |
|----------|-------------|----|
| 1 | Screw M6x22 | x4 |
|----------|-------------|----|

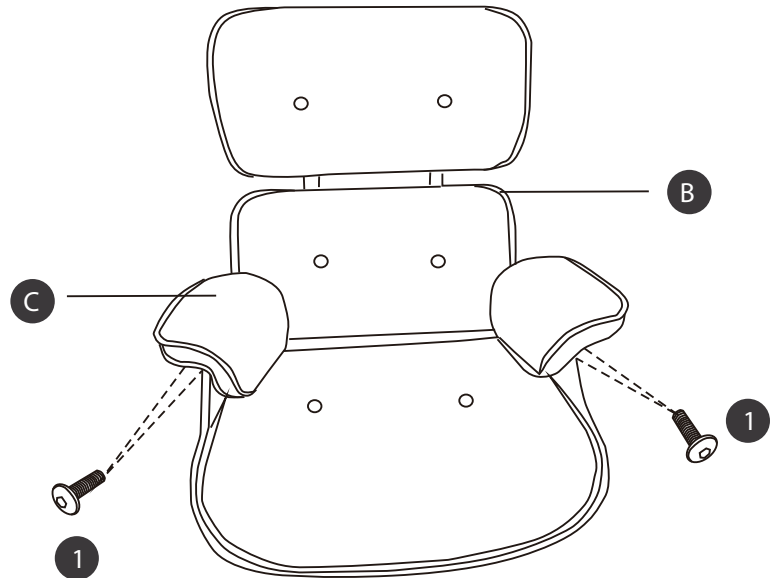

Assembly Step Description

Attach armrest(part C)and tighten up all the bolts


Step 2

Parts

- | | | |
|----------|--------------|----|
| A | Chair tripod | x1 |
|----------|--------------|----|

Hardware

- | | | |
|----------|-------------|----|
| 2 | Screw M6x30 | x4 |
|----------|-------------|----|

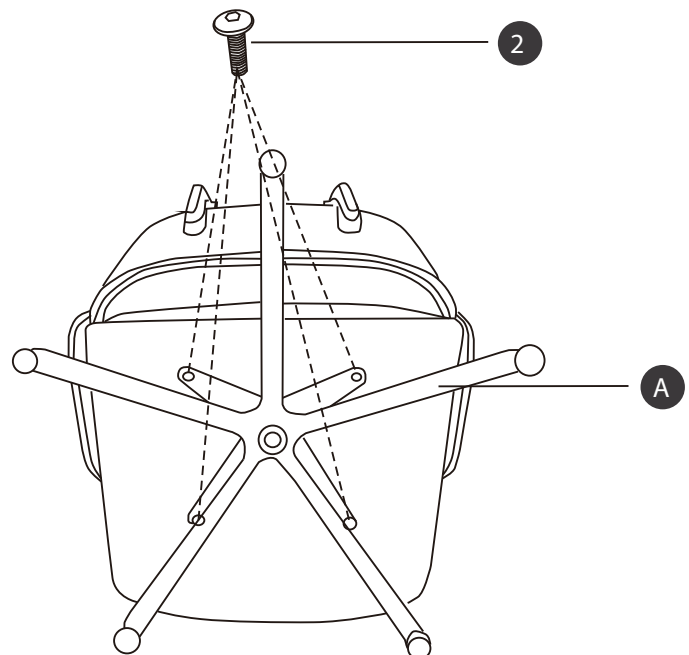

Assembly Step Description

Attach the base part A to the seatofthe chair(part B).
Tightenup all the bolts

Step 3


Parts

- | | |
|-----------------------------|----|
| E Ottoman leg:Bottom | x1 |
| D Ottoman leg: Upper | x1 |

Hardware

Assembly Step Description

Attach part D to part E completely

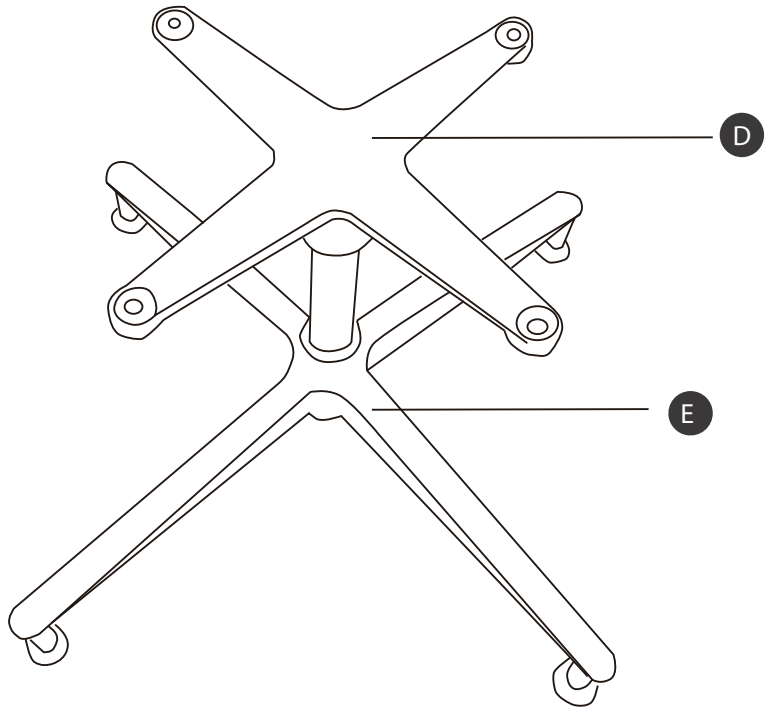

Step 4

Parts


- | | |
|-----------------------|----|
| F Ottoman seat | x1 |
|-----------------------|----|



Hardware

- | | |
|-----------------------|----|
| 2 Screw M6 x30 | x4 |
|-----------------------|----|

Assembly Step Description

Attach the base(part D & part E) to the seat of the Ottoman(part F). Tighten up all the bolts.

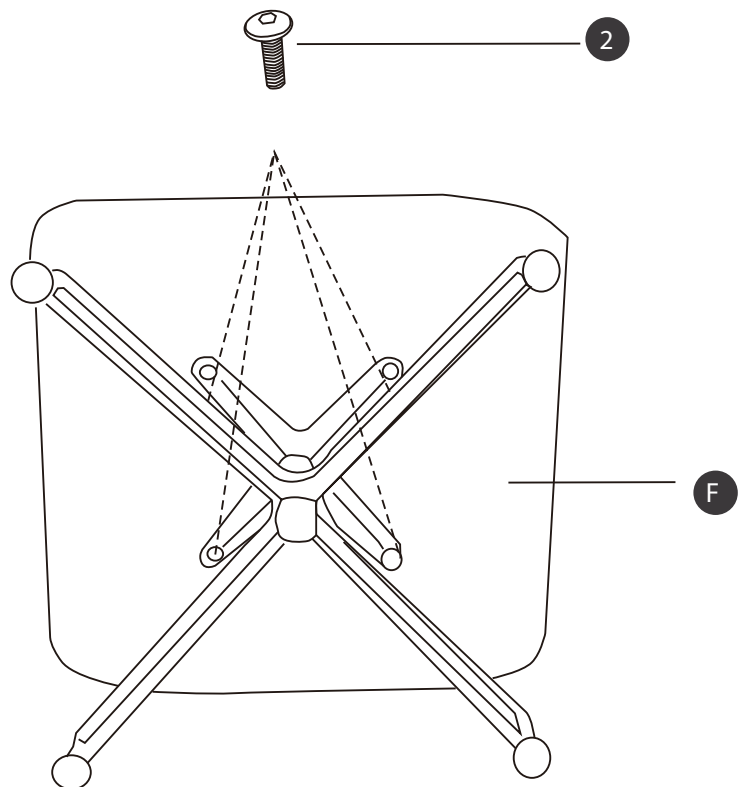

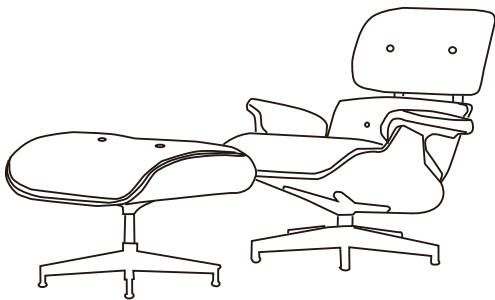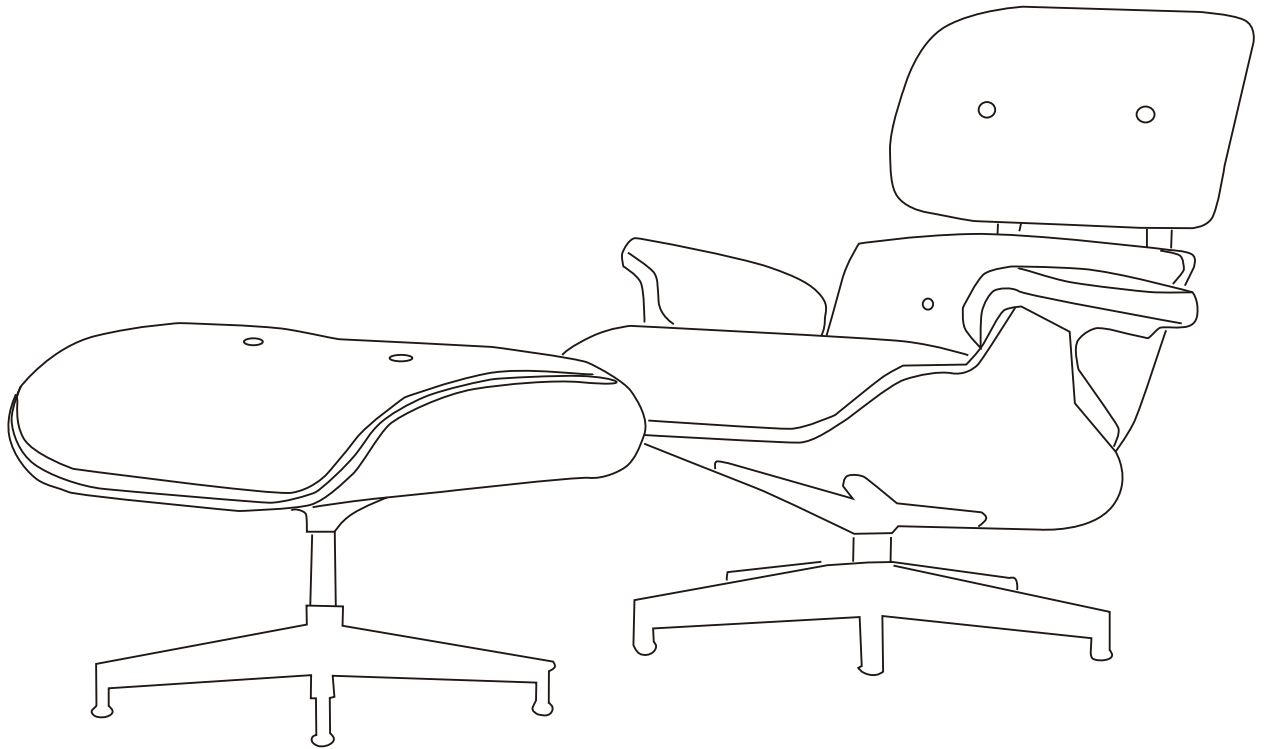

Thank You For Your Purchase!

Contact us if you need any assistance

018 - 985 4811

018 - 351 4811

customerservice@ruma-home.com

Care Instruction

- Wipe with soft, dry cloth.
- To protect finish avoid the use of chemical cleaners.
- Hardware may loosen over time. Periodically check to make sure all connection are tight.